Products Warranty - Australia

For warranty details see our website:

https://www.faucetstrommen.com.au/warranty/

Installation Guide

IG 026

Release Date: 13.12.22

Wall and Hob Spouts



Suits Models:

30720, 30721, 30722, 30723, 30724, 30725, 30726, 30727, 30728, 30729, 31860, 31861, 31862, 34182, 34184, 34185, 34186, 34187, 34188, 34189, 34190, 35105, 35106

Important requirements:



Must be fitted in accordance with AS/NZS 3500 by qualified plumber



Mains 500kpa regulator must be fitted



Maximum hot water temp. 65°C



Water lines must be flushed prior to connection



Only clean municiple water supply. No bore, dam or hard water without filtration & treatment

Cleaning

Clean only with a soft microfiber or similar cloth and warm clean water. Ensure that the cloth is clean and free of any grit or chemical. Dry tap off with a soft clean cloth. Ensure that your tap is not subject to any chemicals, building grit or any type of abrasive of polish. For care of special finishes please visit our website.

Maintenance

Aerators may need to be flushed from time to time if flow diminishes or stream pattern deteriorates. For Pegasi & Cascade mixers, use the aerator key provided to unscrew the aerator, you will notice a "castle" pattern around the edge of the aerator, the key engages with this enabling you to unscrew the insert easily. For Zeos models, use the aerator key to unscrew the aerator housing, you will then be able to pop the insert out the top of the housing. Rinse off the upper face of the insert with running water and gently brush clean with an old toothbrush to remove any debris before refitting the aerator.

Faucet Australia Pty Ltd www.faucetstrommen.com.au P: +61 3 5450 4236

ABN 83683523321 31 Tate Drive, Kerang VIC 3579 sales@faucetstrommen.com.au

Installation

- 1. Ensure that the ½" water supply point is not protruding from the wall/hob more than 15mm. Remove any debris or tile glue from the point, wind sufficient thread tape onto the point.
- 2. Run a liberal amount of water into a bucket to rinse the lines.
- 3. Place a flange/ dress ring onto the back of the spout and screw this onto the water supply point until it screws back close to the tiles, then press the flange back against the tiles if required.
- 4. In some cases it may be necessary to remove the spout from the bracket to facilitate practical installation (when installing swivel spouts). If this is the case, there is an allen key provided to carry out this task.
- 5. After the bracket is installed, refit spout carefully, ensuring no seal damage. Ensure grub screw corresponds correctly with swivel prior to tightening.
- 6. Test the system.



