

Products Warranty - Australia

For warranty details see our website:

<https://www.faucetstrommen.com.au/warranty/>

Installation Guide

IG 030

Release Date: 08.06.23



Bottle Traps

Suits Models:

34351

Important requirements:



Must be fitted in accordance with AS/NZS 3500 by qualified plumber



Mains 500kpa regulator must be fitted



Maximum hot water temp. 65°C



Water lines must be flushed prior to connection



Only clean municipal water supply. No bore, dam or hard water without filtration & treatment

Cleaning

Clean only with a soft microfiber or similar cloth and warm clean water. Ensure that the cloth is clean and free of any grit or chemical. Dry tap off with a soft clean cloth. Ensure that your tap is not subject to any chemicals, building grit or any type of abrasive or polish. For care of special finishes please visit our website.

Maintenance

Aerators may need to be flushed from time to time if flow diminishes or stream pattern deteriorates. For Pegasi & Cascade mixers, use the aerator key provided to unscrew the aerator. You will notice a "castle" pattern around the edge of the aerator, the key engages with this allowing you to unscrew the insert easily. For Zeos models, use the aerator key to unscrew the aerator housing, you will then be able to pop the insert out the top of the housing. Rinse off the upper face of the insert with running water and gently brush clean with an old toothbrush to remove any debris before refitting the aerator.

Faucet Australia Pty Ltd
www.faucetstrommen.com.au

ABN 83683523321
P: +61 3 5450 4236

31 Tate Drive, Kerang VIC 3579
sales@faucetstrommen.com.au

Installation:

Bottle trap Instruction for: (See diagram A)

- Chrome
- Brushed Chrome
- Brushed New Nickel
- Polished New Nickel
- Brushed Carbon
- Brushed Graphite
- Discovery Bronze
- Armada Bronze
- Brushed Admiralty Brass
- Polished Admiralty Brass
- Brushed Liberty Gold
- Polished Liberty Gold
- Brushed Terminus Copper
- Polished Terminus Copper

1. Apply lubricant to 40mm DVW pipe and the rubber o-rings in the flange
2. Cut 40mm DVW pipe to ensure no more than 15mm is protruding from the finished wall surface.
3. Cut outlet tube to required length.
4. Push flange onto outlet tube.
5. Push outlet tube into 40mm DVW pipe and push flange back until flush with wall surface.
6. Unscrew outlet nut on bottle trap. Remove enclosed washer and place onto 'upstream' end of the outlet pipe.
7. Connect 'upstream' end of the outlet pipe to the bottle trap using nut.
8. Connect trap to plug and waste using adjustable inlet tube and nuts. Note there is an adaptor supplied to suit 32-40mm connections.
9. Tighten all compression nuts and bottom service plug and water test to ensure no leaks

Bottle trap Instruction for: (See diagram B)

- Switzrok Matte Black
- Switzrok Matte White
- Raw Polished Brass
- Raw Brushed Brass
- Antique Brass Light
- Antique Brass Medium

1. Apply lubricant to 40mm DVW pipe and the rubber washer in the flange
2. Cut 40mm DVW pipe to ensure no more than 10mm is protruding from the finished wall surface.
3. Remove rubber adaptor seal from outlet tube.
4. Cut outlet tube to required length.
5. Push flange onto outlet tube.
6. Replace Rubber adaptor seal onto outlet tube
7. Push outlet tube into 40mm DVW pipe and push flange back until flush with wall surface.
8. Unscrew outlet nut on bottle trap. Remove enclosed washer and place onto 'upstream' end of the outlet pipe.
9. Connect 'upstream' end of the outlet pipe to the bottle trap using nut.
10. Connect trap to plug and waste using adjustable inlet tube and nuts. Note there is an adaptor supplied to suit 32-40mm connections. This is screwed loosely onto top of bottle trap.
11. Tighten all compression nuts and bottom service plug and water test to ensure no leaks

Diagram A

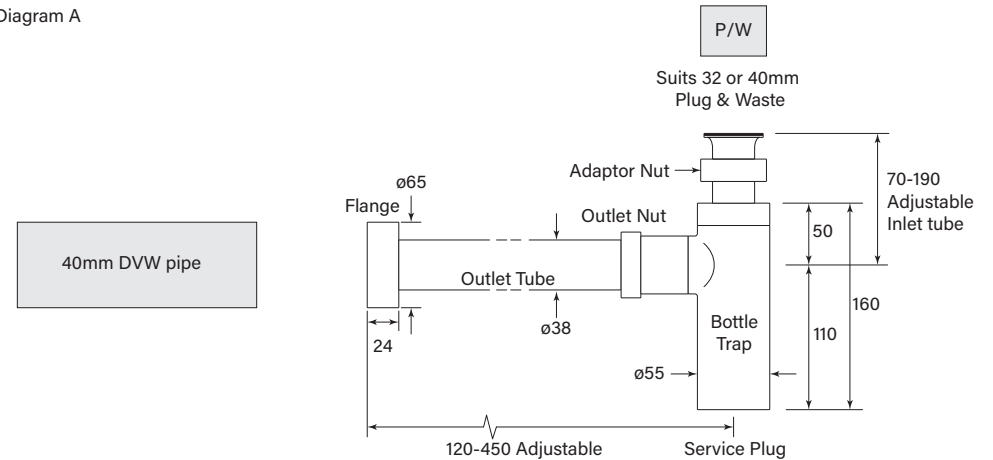


Diagram B

