

Products Warranty - Australia

For warranty details see our website:

<https://www.faucetstrommen.com.au/warranty/>

Installation Guide

IG 034

Release Date: 13.12.22



Pop Wastes

 
Suits Models:

34350, 34354, 34355

Important requirements:



Must be fitted in accordance with AS/NZS 3500 by qualified plumber



Mains 500kpa regulator must be fitted



Maximum hot water temp. 65°C



Water lines must be flushed prior to connection



Only clean municipal water supply. No bore, dam or hard water without filtration & treatment

Cleaning

Clean only with a soft microfiber or similar cloth and warm clean water. Ensure that the cloth is clean and free of any grit or chemical. Dry tap off with a soft clean cloth. Ensure that your tap is not subject to any chemicals, building grit or any type of abrasive or polish. For care of special finishes please visit our website.

Maintenance

Aerators may need to be flushed from time to time if flow diminishes or stream pattern deteriorates. For Pegasi & Cascade mixers, use the aerator key provided to unscrew the aerator. You will notice a "castle" pattern around the edge of the aerator, the key engages with this allowing you to unscrew the insert easily. For Zeos models, use the aerator key to unscrew the aerator housing, you will then be able to pop the insert out the top of the housing. Rinse off the upper face of the insert with running water and gently brush clean with an old toothbrush to remove any debris before refitting the aerator.

Faucet Australia Pty Ltd
www.faucetstrommen.com.au

ABN 83683523321
P: +61 3 5450 4236

31 Tate Drive, Kerang VIC 3579
sales@faucetstrommen.com.au

Installation:

Basin pop wastes:

Note different connection thread sizes to suit 32mm (See Diagram A) and 40mm (See Diagram B) piping and trap connections

1. Disassemble waste and place top flanged section with pop mechanism through basin. Ensure seal seated correctly under top flange.
2. Screw base connection from underside of basin to the top flanged section. Ensure seal seated correctly and use spacers if required.
3. Once trap fitted, test pop waste for leaks before leaving site.

40mm Bath pop wastes: (See Diagram C)

1. Disassemble waste and place top flanged section with pop mechanism through basin. Ensure seal seated correctly under top flange.
2. Screw base connection from underside of basin to the top flanged section. Ensure seal seated correctly.
3. Once trap fitted, test pop waste for leaks before leaving site.

Diagram A

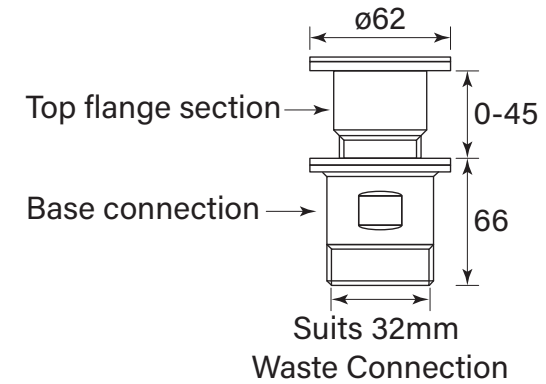 


Diagram B

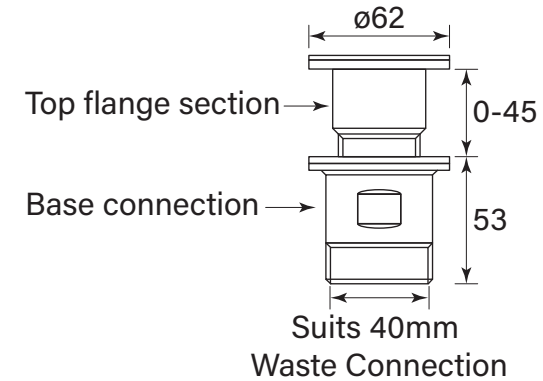 


Diagram C

