

Products Warranty – Australia

For warranty details see our website:

<https://www.faucetstrommen.com.au/warranty/>



IG 054

Release Date: 13.12.22

Installation Guide

Prep Tap

 
Suits Models:

35330 35331


Important requirements:



Must be fitted in accordance with AS/NZS 3500 by qualified plumber



Mains 500kpa regulator must be fitted

 

Maximum hot water temp. 65°C



Only clean municipal water supply. No bore, dam or hard water without filtration & treatment

Cleaning

Clean only with a soft microfiber or similar cloth and warm clean water. Ensure that the cloth is clean and free of any grit or chemical. Dry tap off with a soft clean cloth. Ensure that your tap is not subject to any chemicals, building grit or any type of abrasive or polish. For care of special finishes please visit our website.

Maintenance

Aerators may need to be flushed from time to time if flow diminishes or stream pattern deteriorates. For Pegasi & Cascade mixers, use the aerator key provided to unscrew the aerator. You will notice a "castle" pattern around the edge of the aerator, the key engages with this allowing you to unscrew the insert easily. For Zeos models, use the aerator key to unscrew the aerator housing, you will then be able to pop the insert out the top of the housing. Rinse off the upper face of the insert with running water and gently brush clean with an old toothbrush to remove any debris before refitting the aerator.

Installation

1. This product is designed to be installed into a bench or sink of maximum thickness 32mm, and with hole cut-out of \varnothing 34 to 35 mm.
2. Place the spout assembly into the centre hole, taking care to ensure the Red Fibre washer is positioned correctly under the flange. Assemble the Spout spacer if needed (only required for thin benches or sinks) and tighten the 1/2" plastic nut firmly using a suitable spanner. Refer picture below.

