

Installation Guide

Cabinet Rail Pull

Suits Models:

36010 36011 36012 36013 36014


Important requirements:

This product is designed to be installed onto cabinet door and drawer fronts. 30mm screws have been supplied for regular front thicknesses, refer drawing below for details.

Cleaning


Clean only with a soft microfiber or similar cloth and warm clean water. Ensure that the cloth is clean and free of any grit or chemical. Dry fitting off with a soft clean cloth. Ensure that your fitting is not subject to any chemicals, building grit or any type of abrasive or polish. For care of special finishes please visit our website.

Front thickness 15 ~ 25

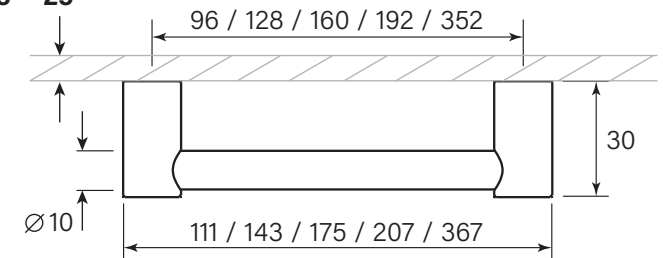

Installation

1. **Measure and Mark:** Determine the ideal placement for the rail pull on your door or drawer. Use a measuring tape to find the center points of the fixing points, then mark a cross with a pencil. Hold the cabinet pull against the door or drawer front to confirm positions.

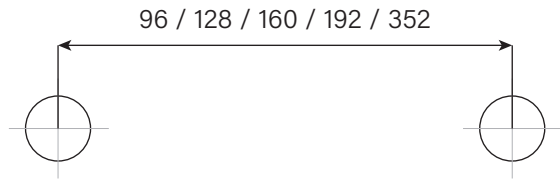

2. **Pre-Drill Holes:** Use a 4.5 mm drill bit to pre-drill holes at the marked locations.
3. **Attach Rail Pull:** Place the rail pull against the door or drawer front again and make sure the holes are aligned. Insert the screws through the holes and thread into back of the cabinet pull. Re-check alignment then tighten firmly using a 2 mm Allen Key.

